

The proVent attic ventilation system is ideal for premium construction and for difficult applications like re-insulation. proVent may be installed prior to the soffit panel installation without fear of blow-out. Available in two sizes for 24" O.C. and 16" O.C. applications. proVent is made with pro-grade tear-resistant high-impact polystyrene. Its rigid vent construction eliminates breakage during re-insulation. proVent offers full joist coverage for maximum air flow and can be used with spray foam applications.

HOW MANY VENTS DO I NEED?

Poor air flow reduces insulation efficiencies and accelerates problems due to moisture. Without ventilation channels, air cannot flow freely from the soffit to the exhaust vents. We recommend installing at least one vent per rafter or truss cavity. Some applications may require multiple vents overlapped to extend the ventilation cavity beyond obstructions, such as knee walls.

PERSONAL PROTECTION

- Eye Protection
- Hard Hat
- Gloves
- Respirator Mask

REQUIRED TOOLS

- Staple Gun or Hammer Tacker
- Ladder (for new construction)

INSTALLING PROVENT

1. Place the vent between trusses making sure to position the side stapling flanges against the roof deck. Slide vent down a couple of inches into the soffit area.
2. Secure vent to roof deck by stapling down the flange every 6-8 inches on both edges of the vent.
3. At the top plate, close off the area with ADO Products' Windblock (sold separately). Alternatively, firmly tuck a piece of insulation into this area, being careful not to compress the vent.




6. You are finished with the proVent installation and ready to begin insulating your attic.



Get Windblock Protection

Works with proVent and Durovent to provide a moisture impervious vent and block system. *Sold separately WB1285.*

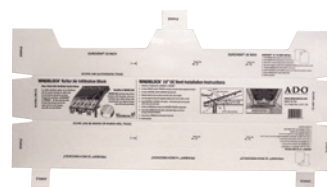

Visit www.adoproducts.com for more information on proVent or to see our other products.

A·D·O[®]
PRODUCTS YOU NEED. SERVICE WE DELIVER.

800-666-8191

www.adoproducts.com